

# Kit 1184

**CITROËN Berlingo**, 3-dr Van, 97-02, 03-08



**CITROËN Xsara Picasso**, 5-dr MPV, 00-03, 04-06\*

**PEUGEOT Partner**, 3/4/5-dr Van, 97-02, 03-08



**PEUGEOT Ranch**, 3/4/5-dr Van, 97-02, 03-08

\* without sunroof



480R  
754

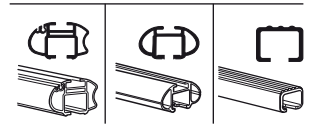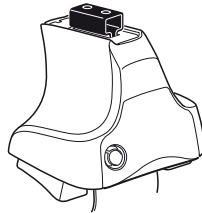





480


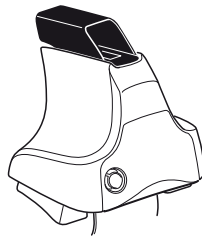


750

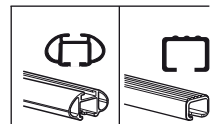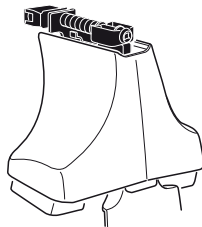


**Kit**

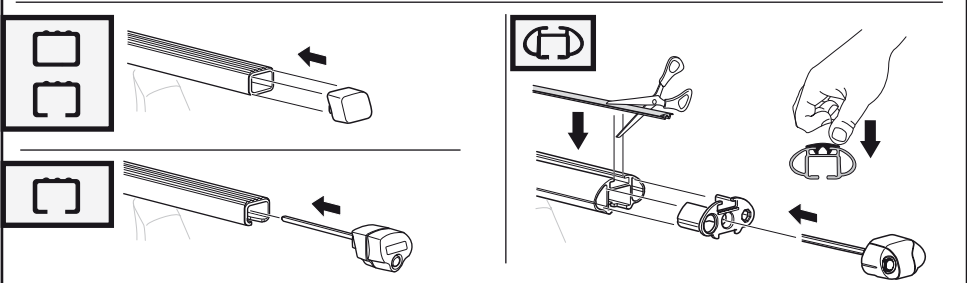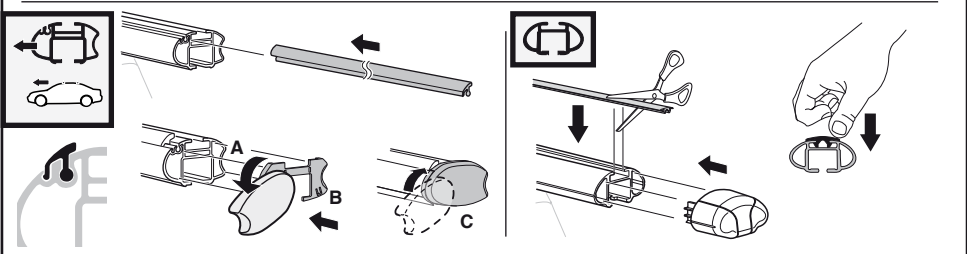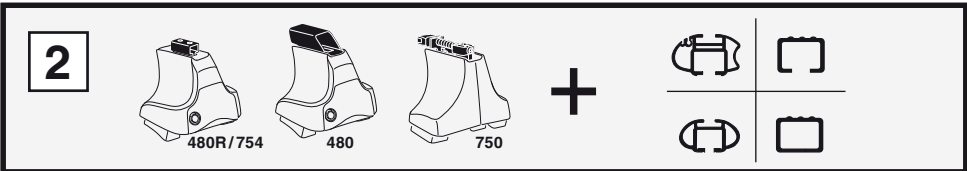
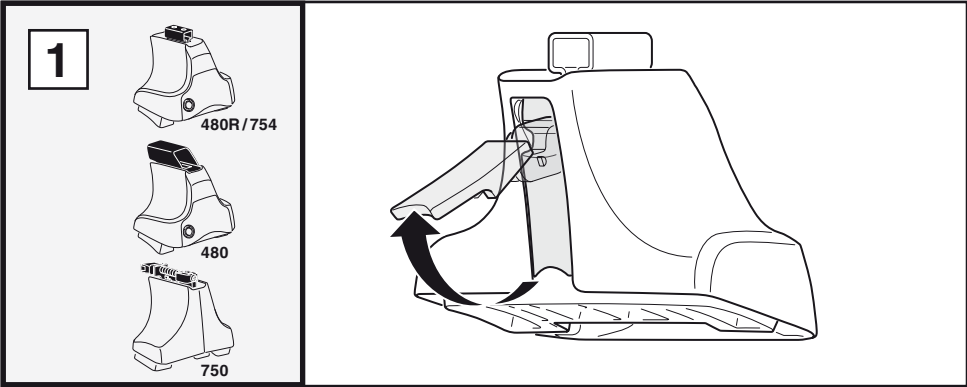


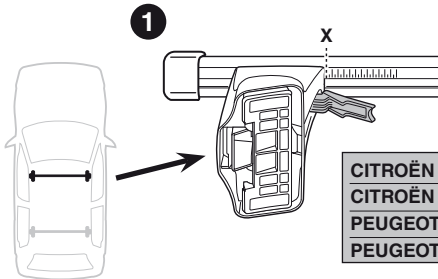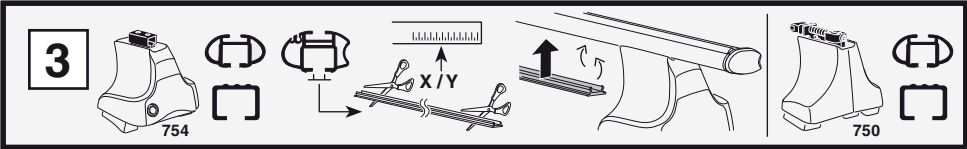



	X
<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>23,5</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>21</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>23,5</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>23,5</b>

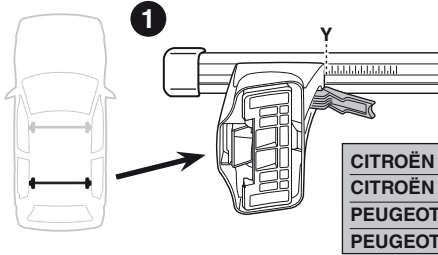



	Y
<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>24</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>20</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>24</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>24</b>

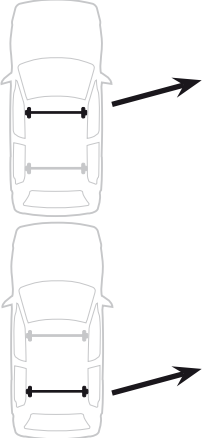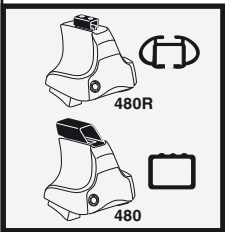

	X inch	X mm
<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>34 7/8"</b>	<b>886 mm</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>33 7/8"</b>	<b>861 mm</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>34 7/8"</b>	<b>886 mm</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>34 7/8"</b>	<b>886 mm</b>

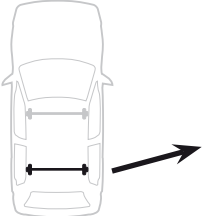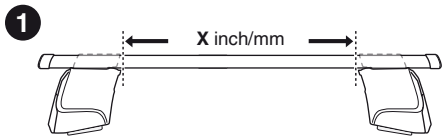

	Y inch	Y mm
<b>CITROËN Berlingo, 3-dr Van, 97-02, 03-08</b>	<b>35 1/8"</b>	<b>891 mm</b>
<b>CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06</b>	<b>33 1/2"</b>	<b>851 mm</b>
<b>PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08</b>	<b>35 1/8"</b>	<b>891 mm</b>
<b>PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08</b>	<b>35 1/8"</b>	<b>891 mm</b>

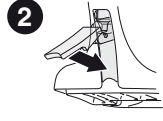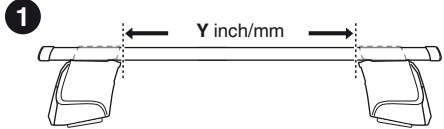








# 4

CITROËN Berlingo, 3-dr Van, 97-02, 03-08


CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06

PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08





PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

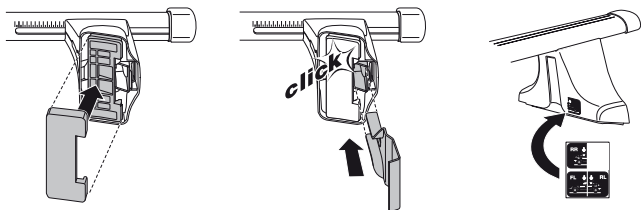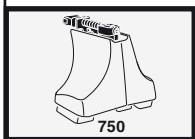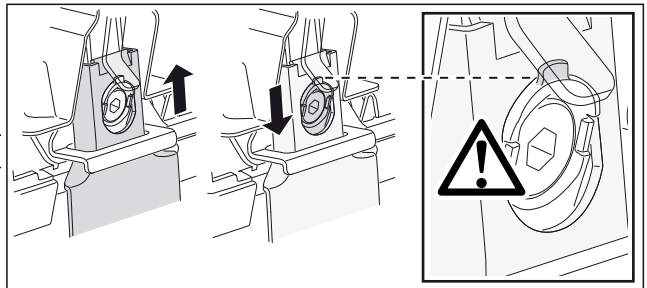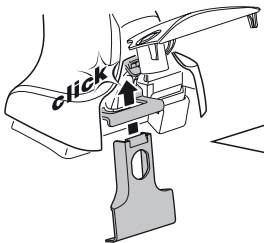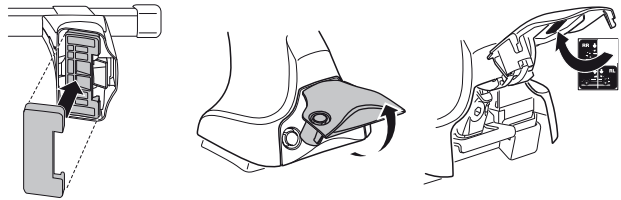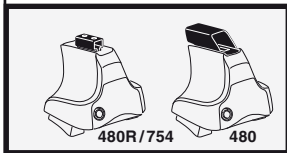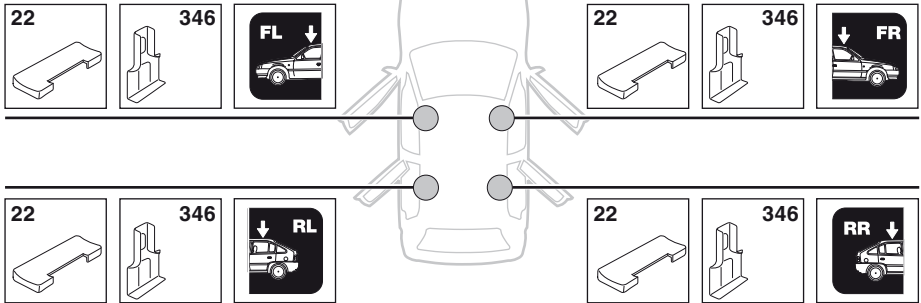

5

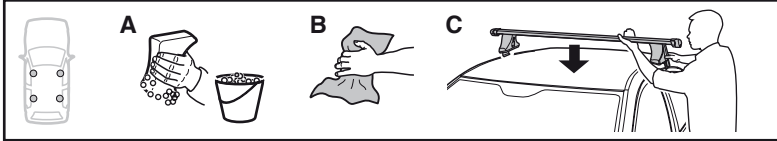

	X mm	Y mm	X inch	Y inch
<b>CITROËN Berlingo</b> , 3-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "
<b>CITROËN Xsara Picasso</b> , 5-dr MPV, 00-03, 04-06	320 mm	700 mm	12 <sup>5</sup> / <sub>8</sub> "	27 <sup>1</sup> / <sub>2</sub> "
<b>PEUGEOT Partner</b> , 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "
<b>PEUGEOT Ranch</b> , 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "

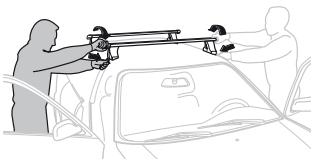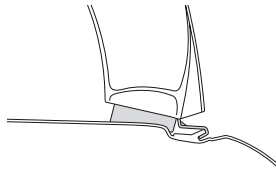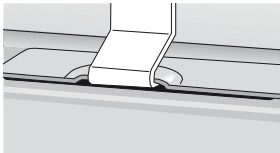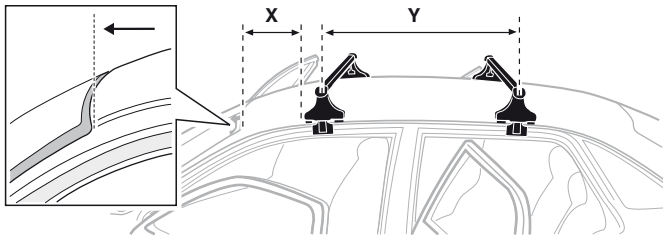

- |              |   |            |   |
|--------------|---|------------|---|
| <b>GB/US</b> | Tighten alternately                                     | <b>CZ</b>  | Pokřeřta багажника dokřeřcaj dokřeřcaj napřezmiennie. |
| <b>D</b>     | Die Schrauben abwechselnd anziehen                      | <b>SK</b>  | Dofahujte striedavo                                   |
| <b>F</b>     | Serrer alternativement chaque côté                      | <b>SLO</b> | Privijajte izmenično.                                 |
| <b>NL</b>    | Afwisselend aan de linker- en de rechterkant aandraaien | <b>HR</b>  | Naizmjenično zategnite                                |
| <b>I</b>     | Alternare il serraggio delle viti                       | <b>HU</b>  | Egymástól függetlenül szorítandó                      |
| <b>E</b>     | Apretar alternadamente                                  | <b>GR</b>  | Σφιγίγστε ενολάξ                                      |
| <b>PT</b>    | Aperte alternadamente                                   | <b>TR</b>  | Dönüşümlü sıkın                                       |
| <b>S</b>     | Dra åt växelvis   | <b>中文</b>  | 交替拧紧  |
| <b>FIN</b>   | Kierrä vuorotellen                                      | <b>한국어</b> | 빈갈아 가며 조이십시오.   |
| <b>EST</b>   | Pinguldage vaheldumisi                                  | <b>日本語</b> | 交互に締め付けてください。   |
| <b>LAT</b>   | Pielvelciet pamišus                                     | <b>ไทย</b> | ขันในแบบสลับ  |
| <b>LIT</b>   | Užsukinėkite pakaitomis                                 |            |   |
| <b>PL</b>    | Śruby dokręcaj naprzemiennie                            |            |   |
| <b>RU</b>    | Затягивайте попеременно                                 |            |   |








6








480R/754




480

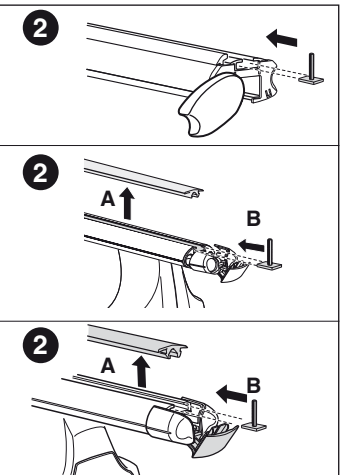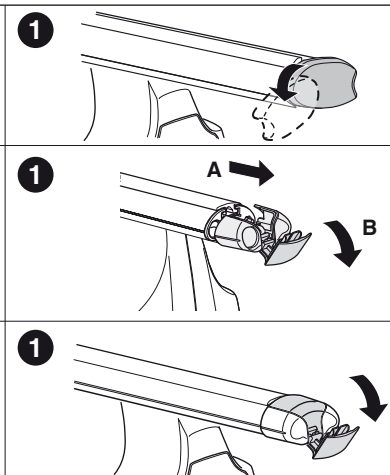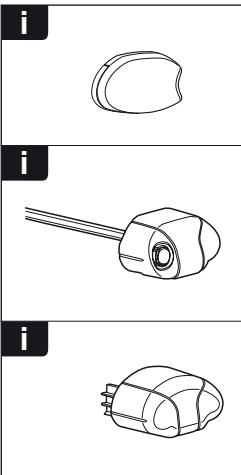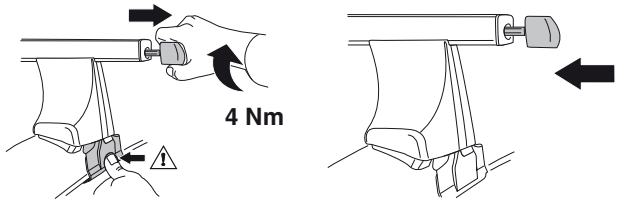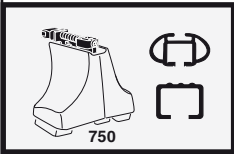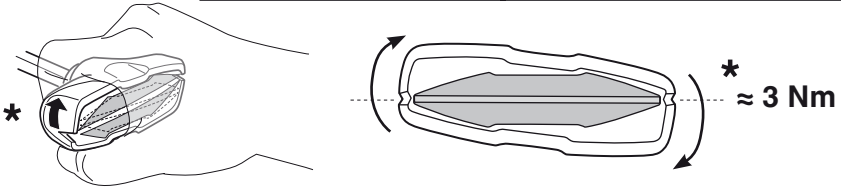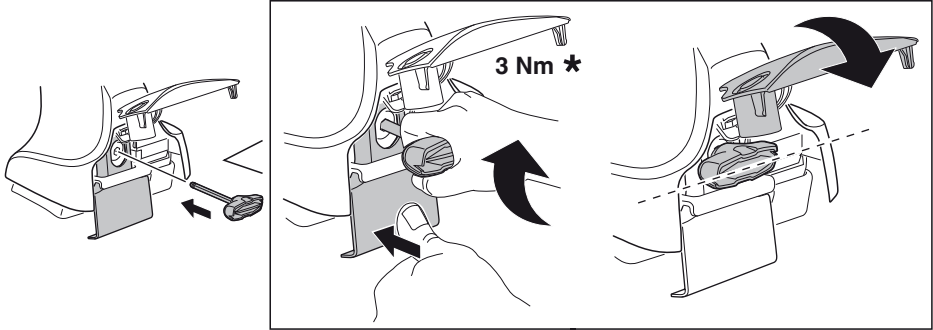


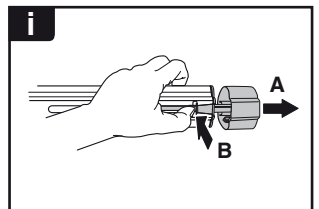
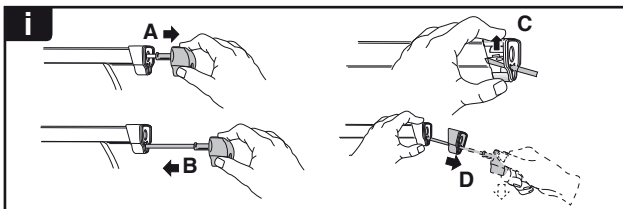
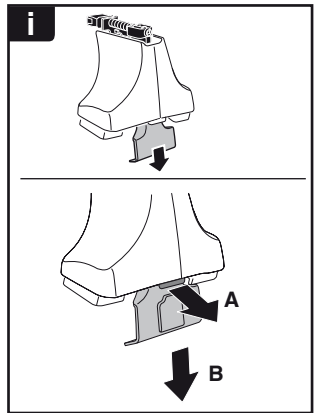
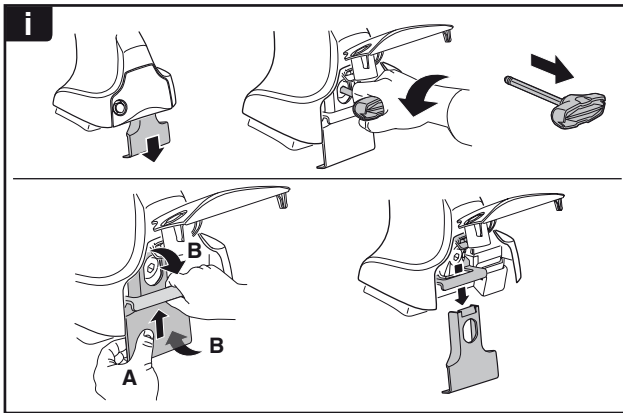
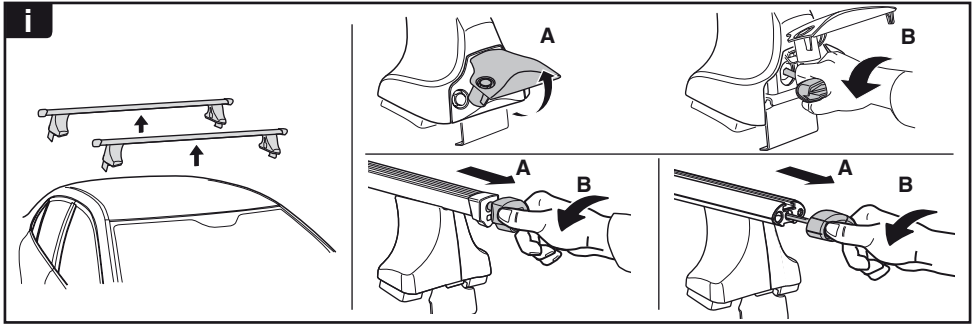


**THULE**  
SWEDEN  
**ONE  
KEY  
SYSTEM**

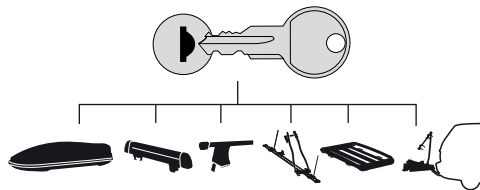

- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA




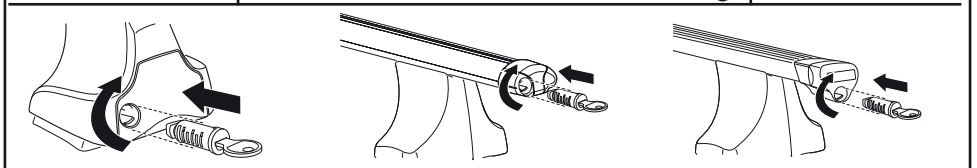


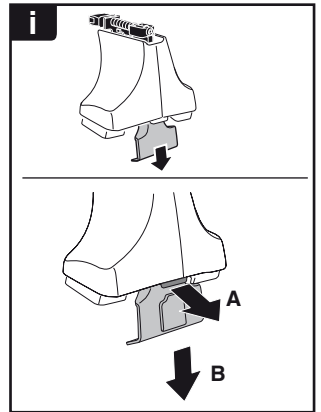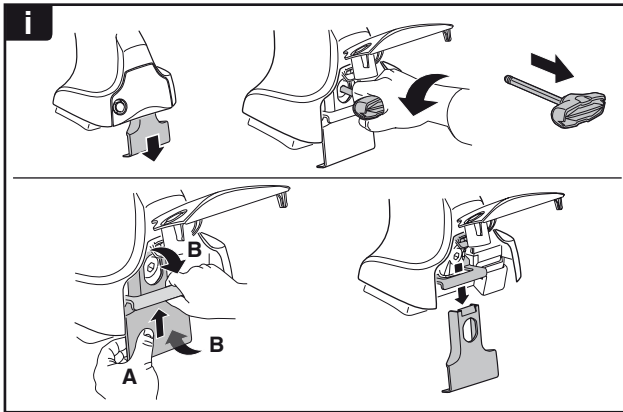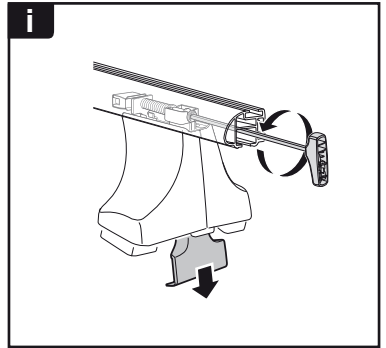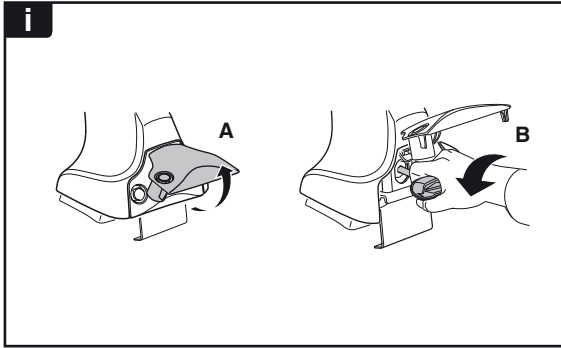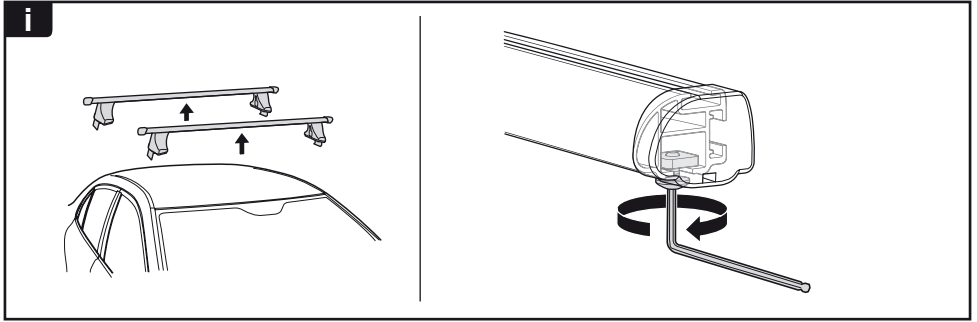


**ww** ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN  
**NA** ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

@ info@thule.com  
 customer.service@thule.com





www.thuleprofessional.com

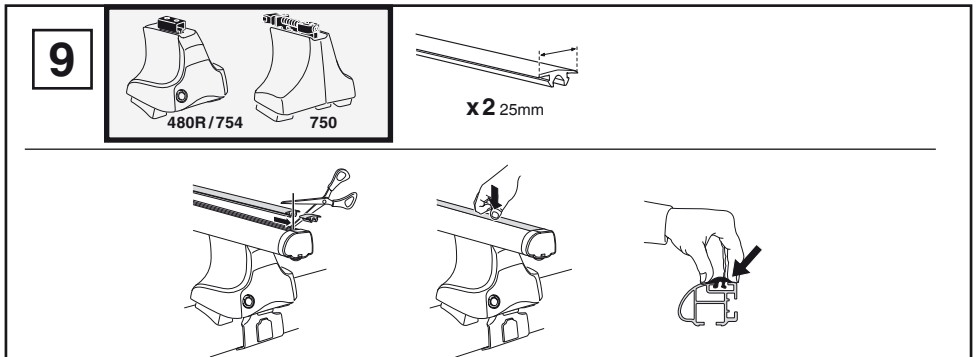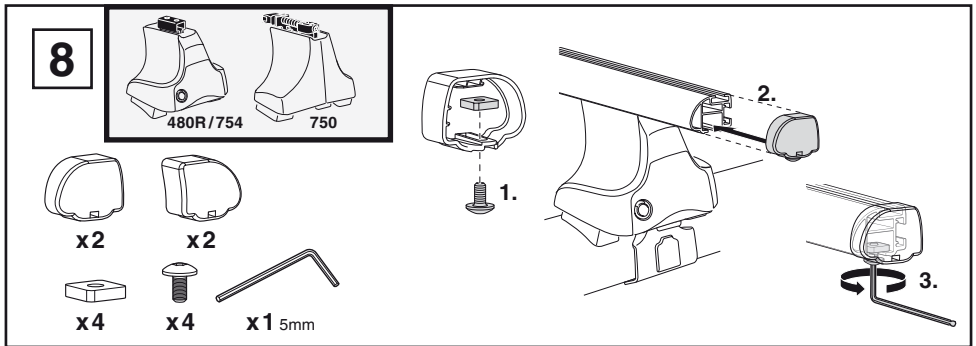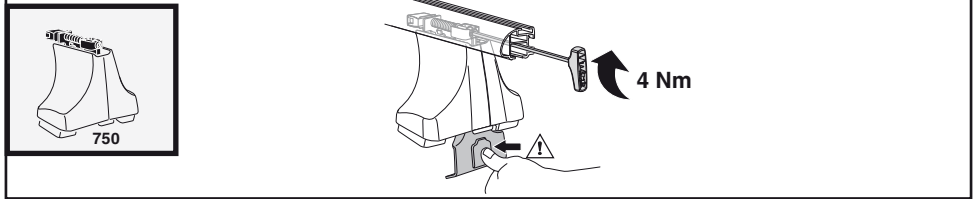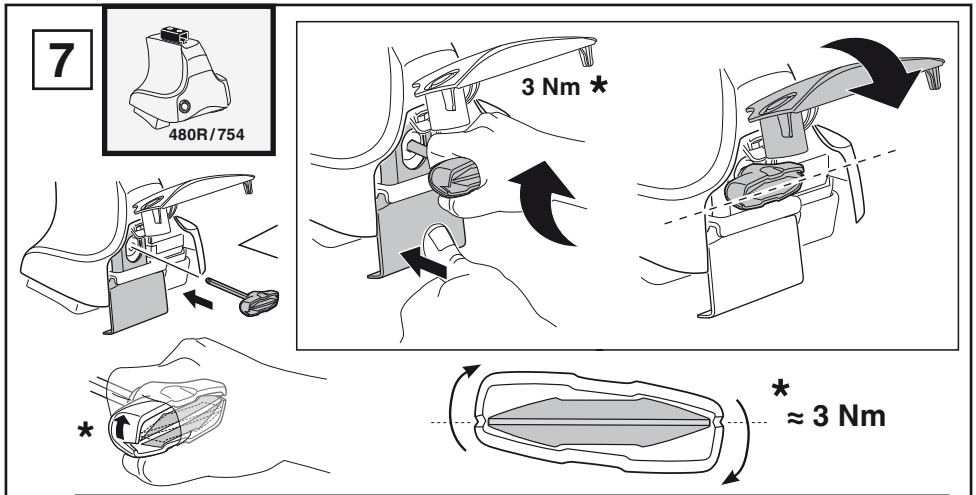

6

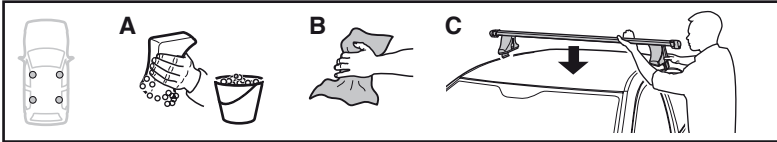

	X mm	Y mm	X inch	Y inch
CITROËN Berlingo, 3-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06	320 mm	700 mm	12 <sup>5</sup> / <sub>8</sub> "	27 <sup>1</sup> / <sub>2</sub> "
PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "
PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 <sup>3</sup> / <sub>8</sub> "	23 <sup>5</sup> / <sub>8</sub> "

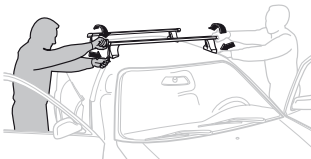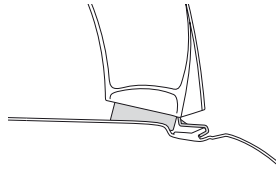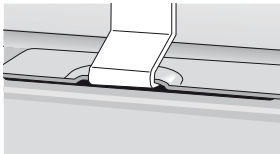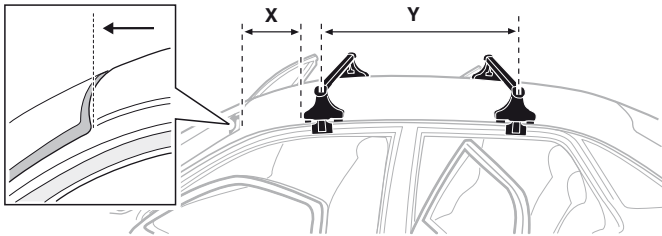

<b>GB/US</b>	Tighten alternately	<b>CZ</b>	Pokřeřta багажника докрeřcaj докрeřcaj naprzemiennie.
<b>D</b>	Die Schrauben abwechselnd anziehen	<b>SLO</b>	Dofahajte striedavo
<b>F</b>	Serrer alternativement chaque côté	<b>SRO</b>	Privijajte izmienično.
<b>NL</b>	Afwisselend aan de linker- en de rechterkant aandraaien	<b>HR</b>	Naizmjenično zategnite
<b>I</b>	Alternare il serraggio delle viti	<b>HU</b>	Egymástól függetlenül szorítandó
<b>E</b>	Apretar alternativamente	<b>GR</b>	Σφιγγετε εναλλάξ
<b>PT</b>	Aperte alternadamente	<b>TR</b>	Dönüşümlü sıkın
<b>S</b>	Dra åt växelvis	<b>中文</b>	交替拧紧
<b>FIN</b>	Kierrä vuorotellen	<b>한국어</b>	번갈아 가며 조이십시오.
<b>EST</b>	Pinguldage vaheldumisi	<b>日本語</b>	交互に締め付けてください。
<b>LAT</b>	Pielieciet pamišus	<b>ไทย</b>	ขันในแบบสลับ
<b>LIT</b>	Užsukinėkite pakaitomis		
<b>PL</b>	Śruby dokręcaj naprzemiennie		
<b>RU</b>	Затягивайте попеременно		












# 5

CITROËN Berlingo, 3-dr Van, 97-02, 03-08



CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06

PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08


PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

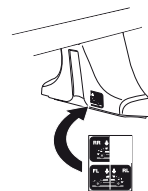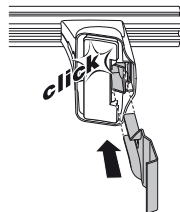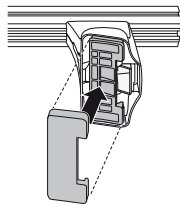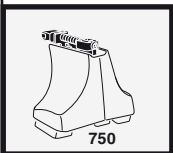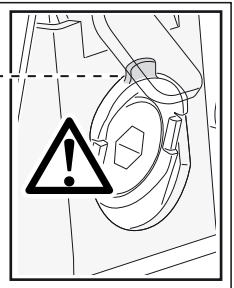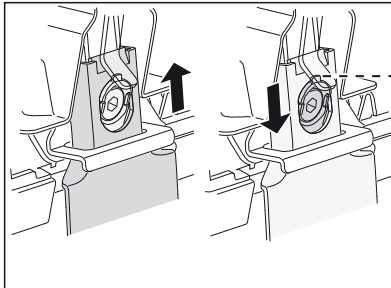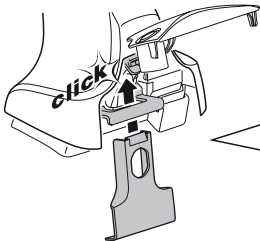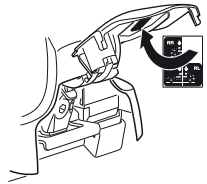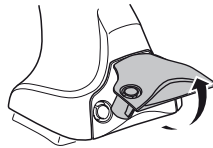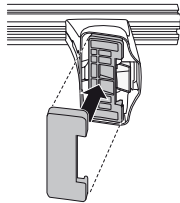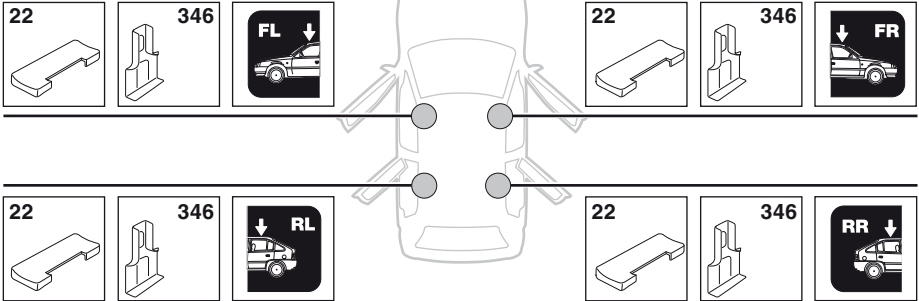



**3**

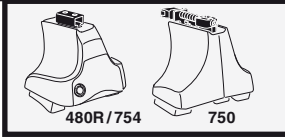

**1**

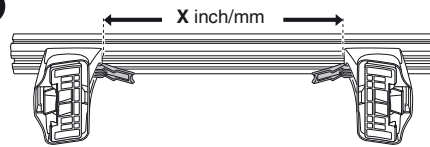


**2**

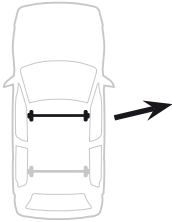
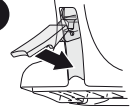


	X inch	X mm
CITROËN Berlingo, 3-dr Van, 97-02, 03-08	34 <sup>7</sup> / <sub>8</sub> "	886 mm
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06	33 <sup>7</sup> / <sub>8</sub> "	861 mm
PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08	34 <sup>7</sup> / <sub>8</sub> "	886 mm
PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08	34 <sup>7</sup> / <sub>8</sub> "	886 mm

**1**



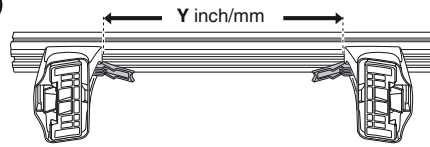


**2**

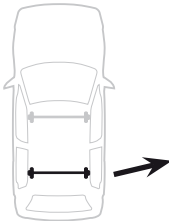
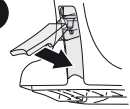


	Y inch	Y mm
CITROËN Berlingo, 3-dr Van, 97-02, 03-08	35 <sup>1</sup> / <sub>8</sub> "	891 mm
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06	33 <sup>1</sup> / <sub>2</sub> "	851 mm
PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08	35 <sup>1</sup> / <sub>8</sub> "	891 mm
PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08	35 <sup>1</sup> / <sub>8</sub> "	891 mm


**4**

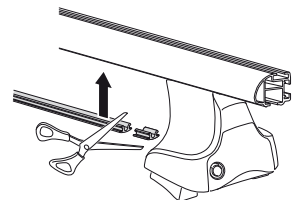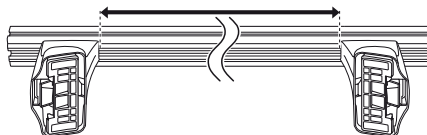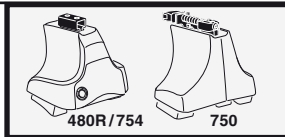


1

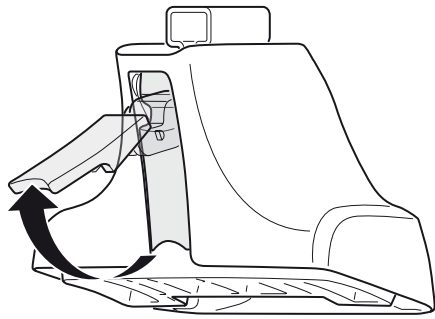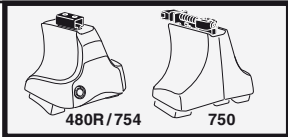


2

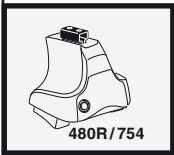

+

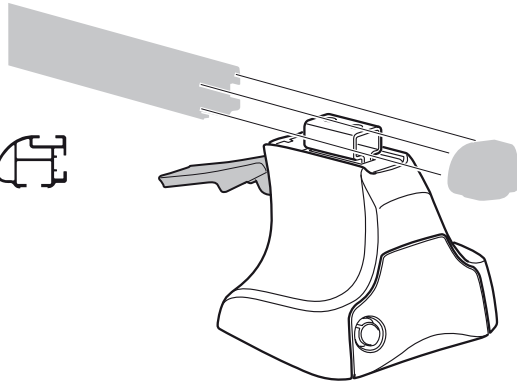

+

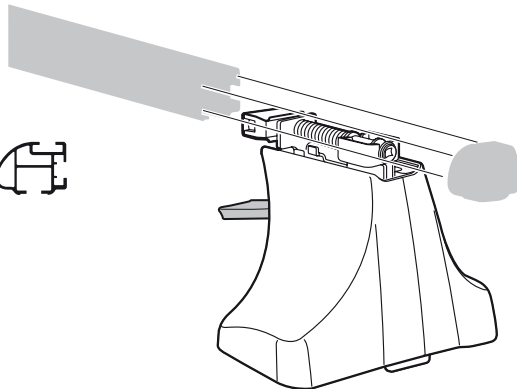

480R/754

750

**Kit**

# instructions

# Kit 1184


CITROËN Berlingo, 3-dr Van, 97-02, 03-08

CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06\*

PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08

PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

\* without sunroof

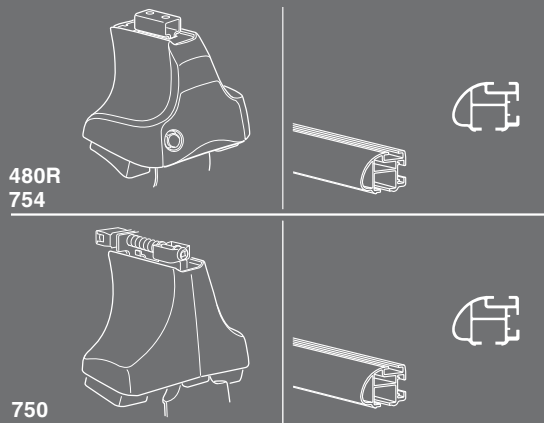

**THULE**<sup>®</sup>  
SWEDEN  
**PROFESSIONAL**

ISO 11154-E